

SmartLink 4050 Series **VoIP SIP Phone**

SL4050/10 10-Line & SL4050/2 2-Line

Quick Start Guide



SL 4050/10



SL4050/2



Approval

The Model SL4050 phones are not approved for, and are not intended for, connection to the Public Switched Telephone Network (PSTN).



WARNING

- The SmartLink SIP Phone contains no user serviceable parts. The equipment shall be returned to Patton Electronics for repairs, or repaired by qualified service personnel.
- **Mains Voltage:** Do not open the case when the power cord is attached. The mains outlet that is utilized to power the SmartLink SIP Phone shall be within 10 feet (3 meters) of the device, shall be easily accessible, and protected by a circuit breaker.
- Do not work on the system or connect or disconnect cables during periods of lightning activity.
- Ultimate disposal of this equipment must be handled according to all applicable national laws and regulations.

1.0 Quick Start



CAUTION

The interconnecting cables shall be acceptable for external use and shall be rated for the proper application with respect to voltage, current, anticipated temperature, flammability, and mechanical serviceability.

- 1 Plug one end of the Ethernet cable included with the VoIP SIP phone into the LAN port on the SIP phone (see **figure 1** for SL4050/10 or **figure 2** on page 4 for SL4050/2). Plug the other end of the cable into the xDSL modem or cable modem (or into an optional router or hub).



WARNING

Do not work on the system or connect or disconnect cables during periods of lightning activity.

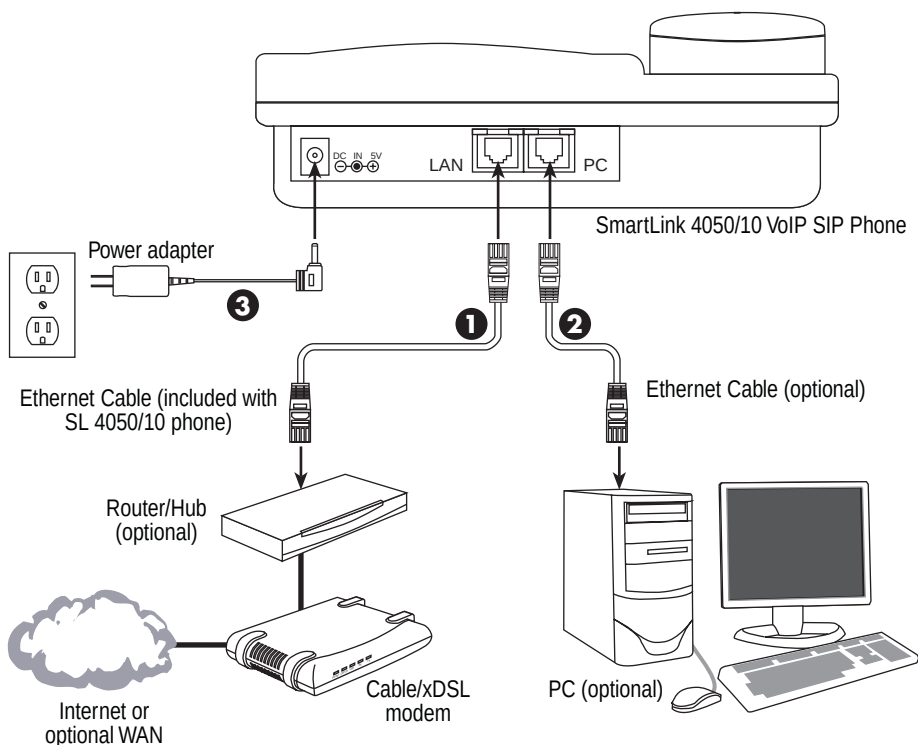


Figure 1. Connecting the SL4050/10 SIP Phone

- 2** If you will not be connecting a PC to the phone, go to step 3. Otherwise, connect an Ethernet cable into the PC port of the SIP phone (see **figure 1** on page 3 for SL4050/10 or **figure 2** for SL4050/2). Plug the other end of the cable into the Ethernet port on the PC.

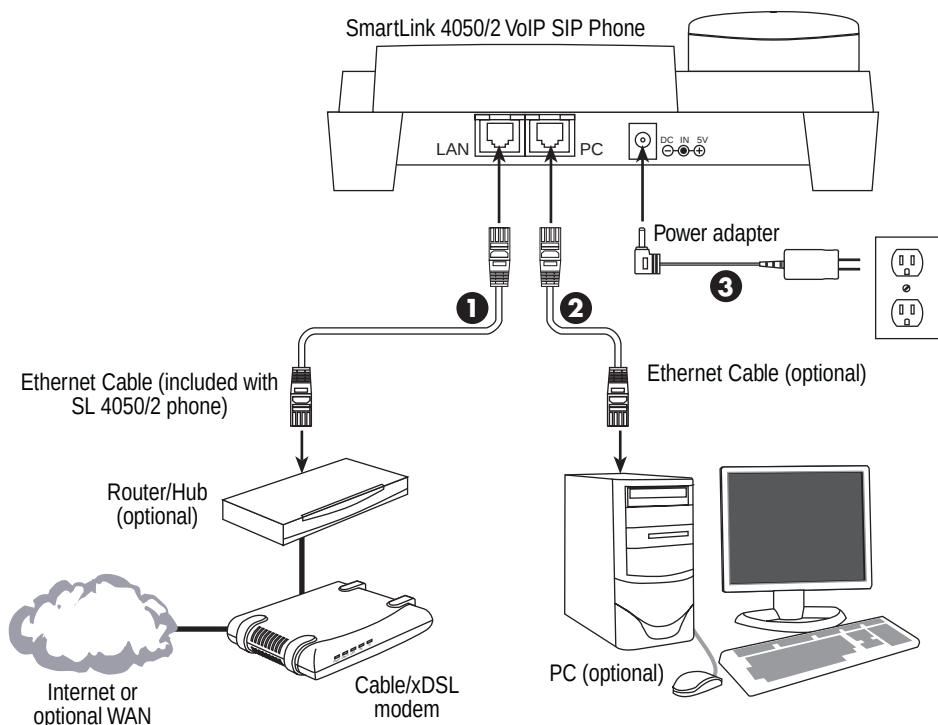


Figure 2. Connecting the SL4050/2 SIP Phone

- 3** Plug the power adapter barrel connector into the power connector on the SIP phone (see **figure 1** on page 3 for SL4050/10 or **figure 2** for SL4050/2). Plug the other end of the power adapter into an AC electrical outlet.

2.0 Setting up the VoIP SIP phone

Note You can stop the setup process at any time by pressing **MENU + OK** to save any changes and exit, or by pressing **MENU + CANCEL** to quit without saving. The phone will automatically time-out and exit the menu screen if there are no inputs from the user.

Use left and right arrows on the control pad to select **ENABLE** or **DISABLE**. The left arrow key can also be used as a backspace key to delete characters.

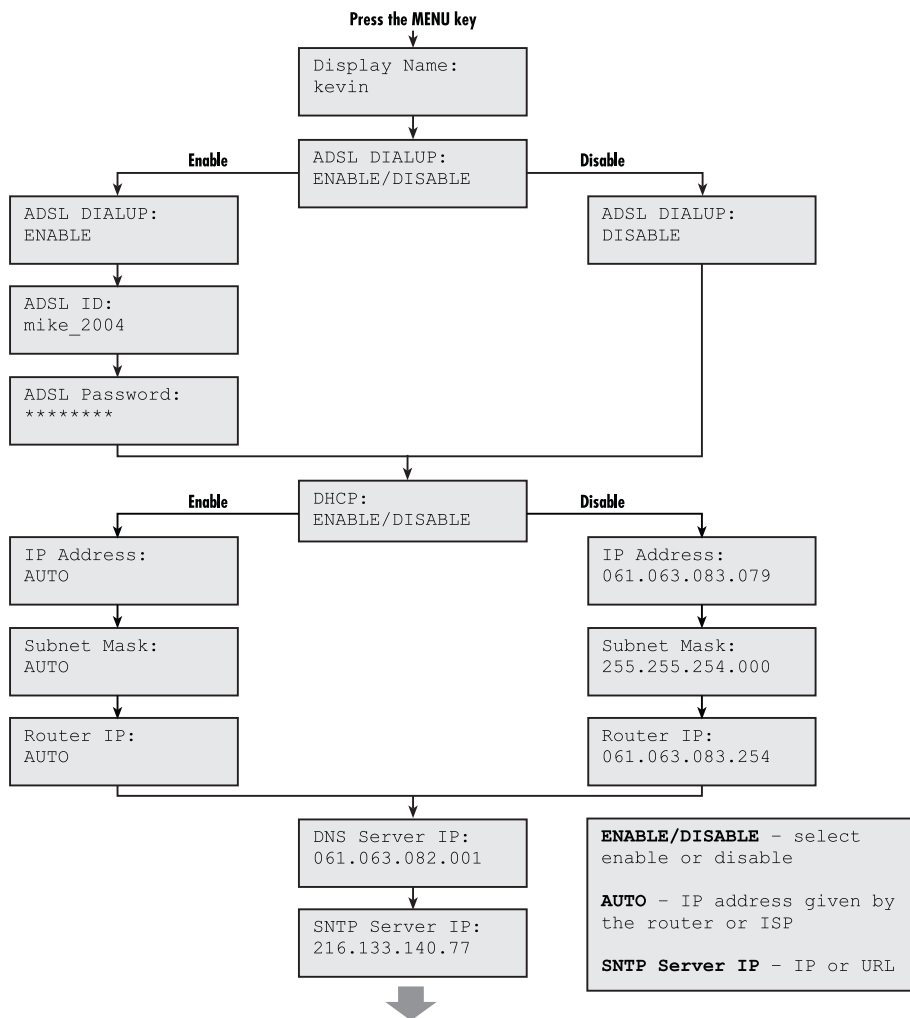


Figure 3. Menu summary, page 1 of 2

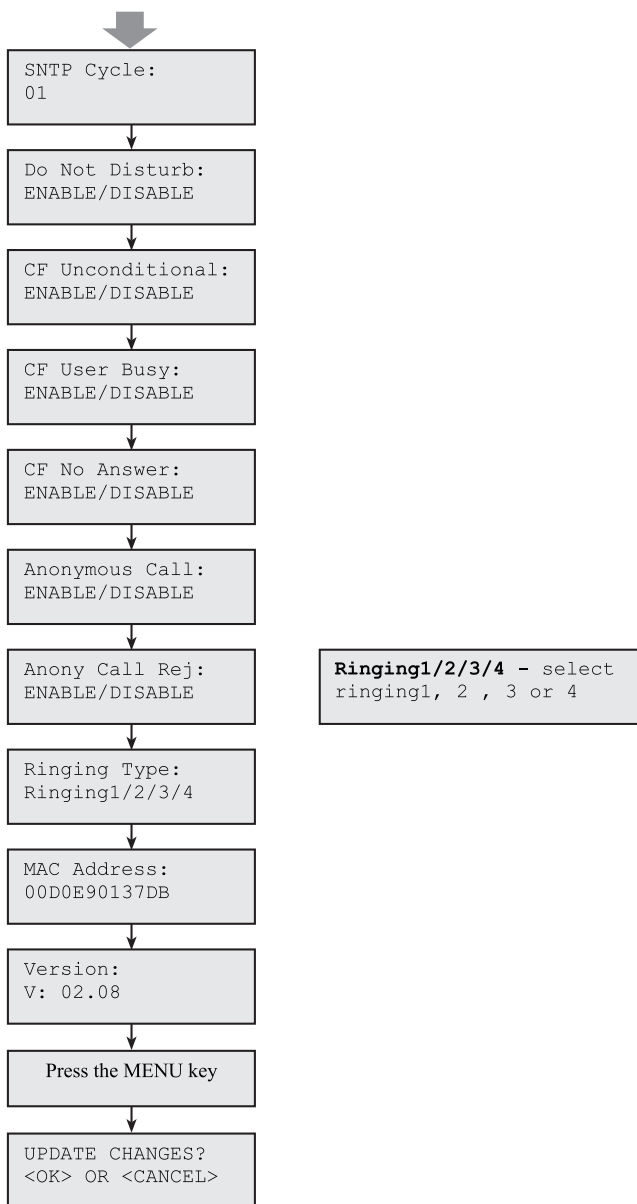


Figure 4. Menu summary, page 2 of 2

3.0 Additional Information

The complete *SmartLink 4050 Getting Started Guide* is located on the CD-ROM that came with your SIP phone. It can also be downloaded for viewing from www.patton.com.

Copyright statement

Copyright © 2005, Patton Electronics Company. All rights reserved.

The information in this document is subject to change without notice. Patton Electronics assumes no liability for errors that may appear in this document.

Trademarks statement

The term *SmartLink* is a trademark of Patton Electronics Company. All other trademarks presented in this document are the property of their respective owners.

Patton support headquarters in the USA

- Online support: Available at www.patton.com
- E-mail support: E-mail sent to support@patton.com will be answered within 1 business day
- Telephone support: Standard telephone support is available five days a week—from 8:00 am to 5:00 pm EST (1300 to 2200 UTC/GMT)—by calling +1 (301) 975-1007
- Support via VoIP: Contact Patton free of charge by using a VoIP ISP phone to call sip:support@patton.com
- Fax: +1 (253) 663-5693

Alternate Patton support for Europe, Middle East, and Africa (EMEA)

- Telephone support: Standard telephone support is available five days a week—from 8:00 am to 5:00 pm CET (0900 to 1800 UTC/GMT)—by calling +41 (0)31 985 25 55
- Fax: +41 (0)31 985 25 26

Note For additional service and support information, refer to the “Contacting Patton for assistance” chapter of the *SmartLink 4050 Series Getting Started Guide* located on the CD-ROM that came with your SIP phone or available online at www.patton.com.

For additional warranty, trademark, compliance, and technical support information, refer to the *SmartLink 4050 Series Getting Started Guide* located on the CD-ROM that came with your SIP phone or available online at www.patton.com.