

SmartNode™ 5300 Series Enterprise Session Border Router, IAD

User Manual



Important

This is a Class A device and is not intended for use in a residential environment. If a copper module is used, it may void the CE Certification. This product is intended for Fiber SFP modules only.

Sales Office: +1 (301) 975-1000
Technical Support: +1 (301) 975-1007
E-mail: support@patton.com
WWW: www.patton.com

Part Number: 07MSN5300-UM, Rev. A
Revised: March 18, 2014

Patton Electronics Company, Inc.

7622 Rickenbacker Drive
Gaithersburg, MD 20879 USA
Tel: +1 (301) 975-1000
Fax: +1 (301) 869-9293
Support: +1 (301) 975-1007
Web: www.patton.com
E-mail: support@patton.com

Trademark Statement

The terms *SmartNode* and *SmartWare* are trademarks of Patton Electronics Company. All other trademarks presented in this document are the property of their respective owners.

Copyright © 2013, Patton Electronics Company. All rights reserved.

The information in this document is subject to change without notice. Patton Electronics assumes no liability for errors that may appear in this document.

Important Information

To use virtual private network (VPN) and/or AES/DES/3DES encryption capabilities with the SmartNode 5300 Series, you may need to purchase additional licenses, hardware, software, network connection, and/or service. Contact sales@patton.com or +1 (301) 975-1000 for assistance.

Warranty Information

The software described in this document is furnished under a license and may be used or copied only in accordance with the terms of such license. For information about the license, see [Appendix F, "End User License Agreement"](#) on page 51 or go to www.patton.com.

Patton Electronics warrants all SmartNode components to be free from defects, and will—at our option—repair or replace the product should it fail within one year from the first date of the shipment.

This warranty is limited to defects in workmanship or materials, and does not cover customer damage, abuse or unauthorized modification. If the product fails to perform as warranted, your sole recourse shall be repair or replacement as described above. Under no condition shall Patton Electronics be liable for any damages incurred by the use of this product. These damages include, but are not limited to, the following: lost profits, lost savings and incidental or consequential damages arising from the use of or inability to use this product. Patton Electronics specifically disclaims all other warranties, expressed or implied, and the installation or use of this product shall be deemed an acceptance of these terms by the user.

Table of Contents

About This Guide	4
Audience	4
Structure	4
Precautions	5
Safety When Working with Electricity	6
General Observations.....	7
Typographical Conventions Used in this Document	7
General Conventions	7
1 5300 General Information	8
SmartNode 5300 and 5300 Series Overview	9
SN5300 Series Model Codes	10
SmartNode 5300 and 5300 Series Rear Panels	10
SmartNode 5300 Rear Panel	10
SmartNode 5300 Rear Panel	10
SmartNode 5300 and 5300 Series Front Panels	12
SmartNode 5300 Front Panel	12
SmartNode 5300 Front Panel	12
2 Applications Overview	14
Introduction	15
Typical Application	15
3 SmartNode Installation	16
Planning the Installation	17
Site Log	17
Network Information	17
Network Diagram	17
IP Related Information	17
Software Tools	18
AC Power Mains	18
Location and Mounting Requirements	18
Installing the SmartNode	18
Placing the SmartNode	18
Installing Cables	18
Connecting the 10/100/1000 Base-T Ethernet LAN and WAN cables	19
Installation cable requirements for the DSL WAN cable (SN5300/4B2G/EUI and SN5300/4B4G/EUI only)	19
Connecting the power supply.....	19
4 Initial Configuration 21	
Introduction	22
Connecting the SmartNode to Your Laptop PC	22

Configuring the Desired IP Address	23
Factory-default IP Settings	23
Login	23
Changing the WAN IP Address	23
Connecting the SmartNode to the Network	24
Loading the Configuration (optional)	24
Additional Information	25
5 Contacting Patton for Assistance	26
Introduction	27
Contact Information	27
Patton Support Headquarters in the USA	27
Alternate Patton Support for Europe, Middle East, and Africa (EMEA)	27
Warranty Service and Returned Merchandise Authorizations (RMAs)	27
Warranty Coverage	27
Out-of-warranty service	28
Returns for credit	28
Return for credit policy	28
RMA Numbers	28
Shipping instructions	28
A Compliance Information	29
Compliance	30
EMC	30
Safety	30
PSTN Regulatory	30
FCC Part 68 (ACTA) Statement	31
Industry Canada Notice	31
CE Declaration of Conformity	32
Authorized European Representative	32
B Specifications	33
Data Connectivity	34
Voice Processing (signaling dependent)	34
Fax and Modem Support	34
Voice Signaling	34
IP Services	34
Management	35
Physical	35
WAN Daughter Card (if applicable)	36
Identification of the SmartNode Devices via SNMP	37
C Cabling	38
Introduction	39
Console	39
Ethernet	40

D	Port Pin-outs	41
	Introduction	42
	Console Port	42
	Ethernet	42
	G.SHDSL-EFM/ATM Port	43
E	SmartNode 5300 Series Factory Configuration	44
	Introduction	45
F	End User License Agreement	47
	End User License Agreement	48
	Definitions	48
	Title	48
	Term	48
	Grant of License	48
	Warranty	48
	Termination	49
	Other licenses	49
	SmartWare licenses	49

List of Figures

1	SmartNode 5300	10
2	SN5300 rear panel	11
3	SN5300 rear panel	12
4	SmartNode 5300 Series front panel	13
5	SN5300 rear panel	13
6	SN5300 typical application	16
7	SN5300 typical application	16
8	SN5480/5490 rear panel	21
9	SN5480/5490 Power LED	21
10	Connecting the SmartNode to your laptop PC	23
11	Connecting the SmartNode to the network	25
12	Connecting a serial terminal	40
13	Typical Ethernet straight-through cable diagram for 10/100Base-T	41
14	Typical Ethernet straight-through cable diagram for 1000Base-T	41
15	EIA-561 (RJ-45 8-pin) port	43

List of Tables

1	General conventions	6
2	SmartNode 5300 Models.....	9
3	SN5300 rear panel ports.....	9
4	SN 5300 rear panel ports	10
5	SN5300 Front panel LEDs	11
6	SN5300 Front panel LEDs	12
7	Sample site log entries	16
8	Factory default IP address and network mask configuration	22
9	G.SHDSL Daughter Card Specifications	35
10	SmartNode Models and their Unique sysObjectID	36
11	RJ45 socket 10/100Base-T	41
12	RJ-45 connector	42

About This Guide

This guide describes the SmartNode 5300 hardware, installation and basic configuration. For detailed software configuration information refer to the *Trinity Software Configuration Guide* and the available Configuration Notes in the Patton Support Knowledgebase..

Audience

This guide is intended for the following users:

- Operators
- Installers
- Maintenance technicians

Structure

This guide contains the following chapters and appendices:

- [Chapter 1](#) on page 12 provides information about SmartNode features and capabilities
- [Chapter 2](#) on page 18 contains an overview describing SmartNode operation and applications
- [Chapter 3](#) on page 20 provides hardware installation procedures
- [Chapter 4](#) on page 25 provides quick-start procedures for configuring the SmartNode
- [Chapter 5](#) on page 30 contains information on contacting Patton technical support for assistance
- [Appendix A](#) on page 33 contains compliance information for the SmartNode
- [Appendix B](#) on page 37 contains specifications for the SmartNodes
- [Appendix C](#) on page 42 provides cable recommendations
- [Appendix D](#) on page 45 describes the SmartNode's ports and pin-outs
- [Appendix E](#) on page 48 lists the factory configuration settings for the SmartNode 5300 and 5300 Series
- [Appendix F](#) on page 51 provides license information that describes acceptable usage of the software provided with the SmartNode 5300 and 5300 Series

For best results, read the contents of this guide *before* you install the SmartNode.

Precautions

Notes, cautions, and warnings, which have the following meanings, are used throughout this guide to help you become aware of potential problems. *Warnings* are intended to prevent safety hazards that could result in personal injury. *Cautions* are intended to prevent situations that could result in property damage or impaired functioning.

Note A note presents additional information or interesting sidelights.



IMPORTANT

The alert symbol and IMPORTANT heading calls attention to important information.



CAUTION

The alert symbol and CAUTION heading indicate a potential hazard. Strictly follow the instructions to avoid property damage.



CAUTION

The shock hazard symbol and CAUTION heading indicate a potential electric shock hazard. Strictly follow the instructions to avoid property damage caused by electric shock.



WARNING

The alert symbol and WARNING heading indicate a potential safety hazard. Strictly follow the warning instructions to avoid personal injury.



WARNING

The shock hazard symbol and WARNING heading indicate a potential electric shock hazard. Strictly follow the warning instructions to avoid injury caused by electric shock.

Safety When Working with Electricity



- Do not open the device when the power cord is connected. For systems without a power switch and without an external power adapter, line voltages are present within the device when the power cord is connected.
- For devices with an external power adapter, the power adapter shall be a listed *Limited Power Source*. The mains outlet that is utilized to power the device shall be within 10 feet (3 meters) of the device, shall be easily accessible, and protected by a circuit breaker in compliance with local regulatory requirements.
- For AC powered devices, ensure that the power cable used meets all applicable standards for the country in which it is to be installed.
- For AC powered devices which have 3 conductor power plugs (L1, L2 & GND or Hot, Neutral & Safety/Protective Ground), the wall outlet (or socket) must have an earth ground.
- For DC powered devices, ensure that the interconnecting cables are rated for proper voltage, current, anticipated temperature, flammability, and mechanical serviceability.
- WAN, LAN & PSTN ports (connections) may have hazardous voltages present regardless of whether the device is powered ON or OFF. PSTN relates to interfaces such as telephone lines, FXS, FXO, DSL, xDSL, T1, E1, ISDN, Voice, etc. These are known as "hazardous network voltages" and to avoid electric shock use caution when working near these ports. When disconnecting cables for these ports, detach the far end connection first.
- Do not work on the device or connect or disconnect cables during periods of lightning activity



This device is NOT intended nor approved for connection to the PSTN. It is intended only for connection to customer premise equipment.



This device contains no user serviceable parts. This device can only be repaired by qualified service personnel.



In accordance with the requirements of council directive 2002/96/EC on Waste of Electrical and Electronic Equipment (WEEE), ensure that at end-of-life you separate this product from other waste and scrap and deliver to the WEEE collection system in your country for recycling.



Always follow ESD prevention procedures when removing and replacing cards.

Wear an ESD-preventive wrist strap, ensuring that it makes good skin contact. Connect the clip to an unpainted surface of the chassis frame to safely channel unwanted ESD voltages to ground.

To properly guard against ESD damage and shocks, the wrist strap and cord must operate effectively. If no wrist strap is available, ground yourself by touching the metal part of the chassis.

General Observations

- Clean the case with a soft slightly moist anti-static cloth
- Place the unit on a flat surface and ensure free air circulation
- Avoid exposing the unit to direct sunlight and other heat sources
- Protect the unit from moisture, vapors, and corrosive liquids

Typographical Conventions Used in this Document

This section describes the typographical conventions and terms used in this guide.

General Conventions

The procedures described in this manual use the following text conventions:

Table 1. General conventions

Convention	Meaning
Garamond blue type	Indicates a cross-reference hyperlink that points to a figure, graphic, table, or section heading. Clicking on the hyperlink jumps you to the reference. When you have finished reviewing the reference, click on the Go to Previous View button  in the Adobe® Acrobat® Reader toolbar to return to your starting point.
Futura bold type	Commands and keywords are in boldface font.
Futura bold-italic type	Parts of commands, which are related to elements already named by the user, are in boldface italic font.
<i>Italicized Futura type</i>	Variables for which you supply values are in <i>italic</i> font
Futura type	Indicates the names of fields or windows.
Garamond bold type	Indicates the names of command buttons that execute an action.
< >	Angle brackets indicate function and keyboard keys, such as <SHIFT>, <CTRL>, <C>, and so on.
[]	Elements in square brackets are optional.
{a b c}	Alternative but required keywords are grouped in braces ({ }) and are separated by vertical bars ()
screen	Terminal sessions and information the system displays are in screen font.
node	The leading IP address or nodename of a SmartNode is substituted with node in boldface italic font.
SN	The leading SN on a command line represents the nodename of the SmartNode
#	An hash sign at the beginning of a line indicates a comment line.

Chapter 1

5300 General Information

Chapter contents

SmartNode 5480 and 5490 Series Overview.....	14
SN5480 Series Model Codes	15
SN5490 Series Model Codes	15
CodesSmartNode 5480 and 5490 Series Rear Panels.....	16
SmartNode 5480 Rear Panel	16
SmartNode 5490 Rear Panel	17
SmartNode 5480 and 5490 Series Front Panels.....	19
SmartNode 5480 Front Panel	19
SmartNode 5490 Front Panel	20

SmartNode 5300 and 5300 Series Overview

The SmartNode 5300 Enterprise Session Border Router enables Universal SIP Trunking and provides a single Integrated Access Device with features like IP Routing, Redundancy, Security and a SIP registrar for survivability. The SN5300 connects to the Enterprise's LAN to an Internet telephony service provider (ITSP), creating a single conduit for multimedia components including voice, video and data.



Figure 1. SmartNode 5300

The SmartNode 5300 Series Enterprise Session Border Router performs the following major functions:

- **Enterprise Session Border Router with Transcoding:** Enables up to 64 transcoding sessions between codecs
- **Secure Enterprise:** Enable VPN, NAT/NAPT, Access Control Lists with Downstream QoS to ensure the most efficient use of your bandwidth
- **IP Routing:** RIP v1/v2, VRRP, policy based routing, loopback interface
- **WAN access:** Support for G.SHDSL-EFM/ATM 4-wire and 8-wire interfaces for your WAN needs.
- **Ethernet Switch:** Vlan tagging, swtiching, and bridging suport
- **Configurable Security Profiles:** Built-in IP address and IP port filtering, ACLs and DoS attack detection creates a comprehensive security environment.

SN5300 Series Model Codes

The SmartNode 5300 Series consists of several models. They differ in the number of transcoding sessions they can support. All models come equipped with two 10/100/1000 Base-T Ethernet ports.

Table 2. SmartNode 5300 Models

Model	Transcoding Sessions
SN5300/4B/EUI	Base model with 4 SIP sessions
SN5300/4B2G/EUI	Made with 4-wire G.SHDSL interface and SIP sessions
SN5300/4B4G/EUI	Model with 8-wire G.SHDSL
SNSW-1B	License for additional SIP sessions

SmartNode 5300 and 5300 Series Rear Panels

SmartNode 5300 Rear Panel

The SmartNode 5300 Series rear panel ports are described in [Table 3](#).

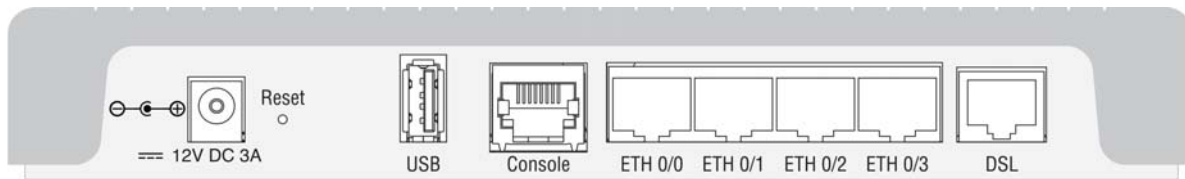 


Figure 2. SN5300 rear panel

Table 3. SN5300 rear panel ports

Port	Description
ETH 0/0 - 0/3	Independent, To be used either as a WAN, LAN, or DMZ port.
Console	Used for service and maintenance, the Console port (see Figure 2), an RS-232 RJ-45 connector, connects the product to a serial terminal such as a PC or ASCII terminal (also called a dumb terminal).
12V DC, 3.0A	Electricity supply socket. (See Figure 2 .)
Reset	The reset button (see Figure 2) can be used to perform a hard reboot of the device.
USB	USB host port, for future use.

SmartNode 5300 Rear Panel

The SmartNode 5300 Series rear panel ports are described in [Table 4](#).

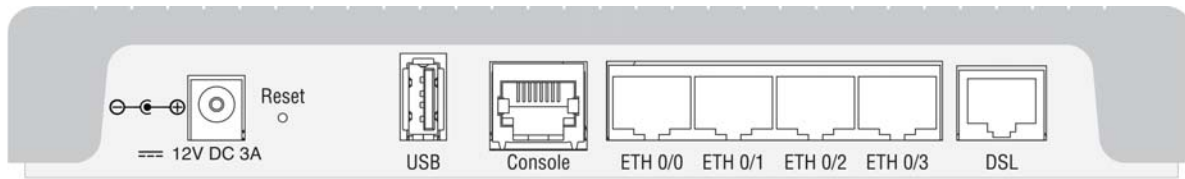 


Figure 3. SN5300 rear panel

Table 4. SN 5300 rear panel ports

Port	Description
ETH 0/0 - 0/3	Only full duplex modes are supported.
Expansion port G.SHDSL, ADSL, EFM, X.21 or SFP	/2G models: 2-pair G.SHDSL-EFM/ATM interface using an RJ45 connector to connect to a ATM or EFM D-SLAM /4G models: 4-pair G.SHDSL-EFM/ATM interface using an RJ45 connector to connect to a ATM or EFM D-SLAM
Console	Used for service and maintenance, the Console port (see Figure 2), an RS-232 RJ-45 connector, connects the product to a serial terminal such as a PC or ASCII terminal (also called a dumb terminal).
12V DC, 1.0A	Electricity supply socket. (See Figure 2 .)
Reset	The reset button (see Figure 2) can be used to perform a hard reboot of the device
USB	USB host port, for future

SmartNode 5300 and 5300 Series Front Panels

SmartNode 5300 Front Panel

Figure 4 shows SmartNode 5300 Series front panel LEDs, the LED definitions are listed in Table 5.

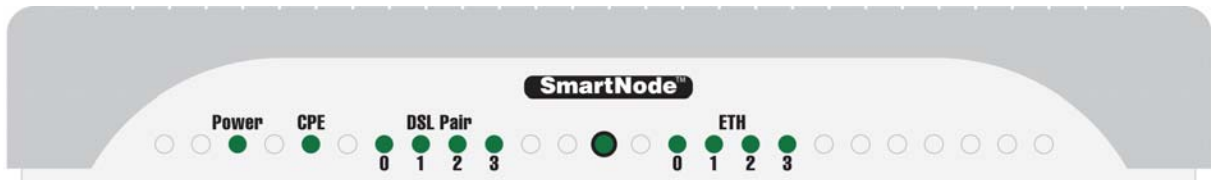 


Figure 4. SmartNode 5300 Series front panel

Table 5. SN5300 Front panel LEDs

LED	Description
Note	If an error occurs, all LEDs will flash once per second.
Power	When lit, indicates power is applied.
Ethernet Link	On when the Ethernet connection on the corresponding port has a link indication.
Ethernet Activity	Flashes when data is received or transmitted at the corresponding Ethernet port.

SmartNode 5300 Front Panel

Figure 5 shows SmartNode 5300 Series front panel LEDs, the LED definitions are listed in Table 6.

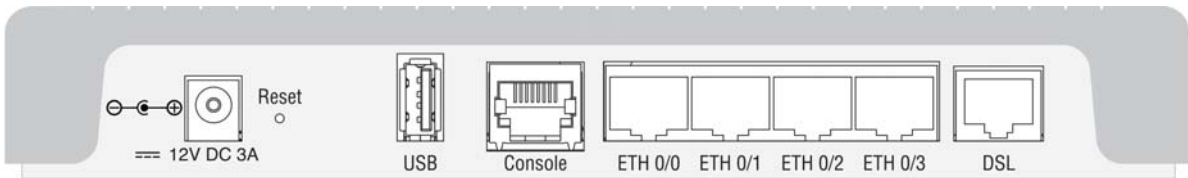 


Figure 5. SN5300 rear panel

Table 6. SN5300 Front panel LEDs

LED	Description
Note	If an error occurs, all LEDs will flash once per second.
Power	When lit, indicates power is applied.
Run	When lit, the unit is in normal operation. Flashes once per second during boot (startup).
Ethernet Link	On when the Ethernet connection on the corresponding port has a link indication.
Ethernet Activity	Flashes when data is received or transmitted at the corresponding Ethernet port.
Expansion LINK (Rear panel - SN5300) *G.SHDSL, ADSL, SFP or X.21	There are two colors in the Link light. Red and Green, the Green will be showing anytime ANY Link is up and traffic can flow. The Red Link will then blink to signify specific pairs that are training/not up. (Please note that if the device is configured to use less than available pairs the non-provisioned link will not be reported as down. Link (Green)OFF: All pairs are DOWN, and traffic will not flow Link (Green) ON: At least on pair is UP, and traffic will flow Link (Red): This LED will blink with a rotating pattern to indicate ports which are still DOWN. 1 BLINK - Pair 1 2 BLINKS - Pair 2 3 BLINKS - Pair 3 4 BLINKS - Pair 4

Chapter 2

Applications Overview

Chapter contents

Introduction	23
Typical Application	23

Introduction

Patton's SmartNode VoIP Enterprise Session Border Routers deliver the features you need for advanced multiservice voice and data network applications. They combine high quality voice-over-IP with powerful *quality of service* routing functions to build professional and reliable VoIP and data networks. This chapter describes typical applications for which this SmartNode is uniquely suited.

Note Detailed configuration information for SmartNode applications can be found online at www.patton.com/smartnode.

Typical Application

The SN5300 enables Universal SIP Trunking and provides a single Integrated Access Device with features like IP Routing, Redundancy, Security and a SIP registrar for survivability.

In addition, the SN5300 enables Transcoding between two networks to most optimally support the bandwidth requirements. E.g. The internal of the network (LAN) could function on G.711 and the WAN side could then be on G.729 enabled by transcoding.

By using two SN5300 with VRRP enabled an Enterprise could connect to two ITSP and provide for failover incase the primary SIP provider trunk has a problem.

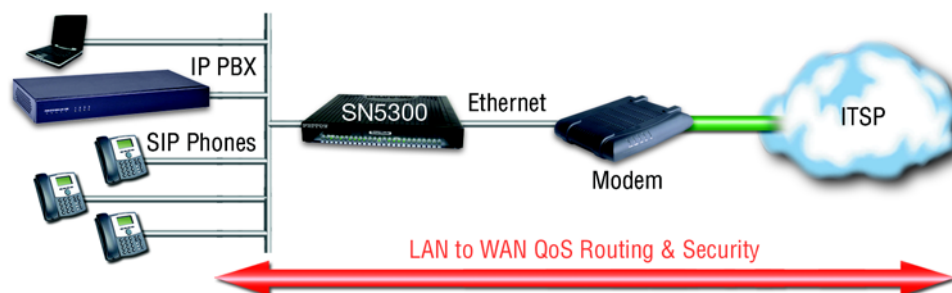 


Figure 6. SN5300 typical application

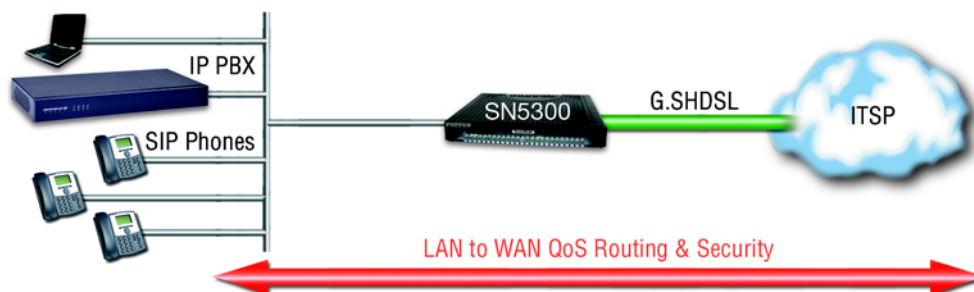 


Figure 7. SN5300 typical application

Chapter 3 **SmartNode Installation**

Chapter contents

Planning the Installation.....	25
Site Log	25
Network Information	25
Network Diagram	25
IP Related Information	25
Software Tools	26
AC Power Mains	26
Location and Mounting Requirements	26
Installing the SmartNode.....	26
Placing the SmartNode	26
Installing Cables	26
Connecting the 10/100/1000Base-T Ethernet LAN and WAN cables	27
Installation cable requirements for the DSL WAN cable (SN5490 only)	27
Connecting the SmartNode's DSL or Fiber port (SN5490 only)	27
Connecting the power supply	28

Planning the Installation

Before installing the SmartNode, the following tasks should be completed:

- Create a **network diagram** (see section “[Network Information](#)” on page 21)
- Gather **IP related information** (see section “[IP Related Information](#)” on page 21 for more information)
- Install the hardware and software needed to configure the SmartNode. (See section “[Software Tools](#)” on page 22)
- Verify **power source reliability** (see section “[Connecting the power supply](#)” on page 23).

After you have finished preparing for SmartNode installation, go to section “[Installing the SmartNode](#)” on page 22 to install the device.

Site Log

Patton recommends that you maintain a site log to record all actions relevant to the system, if you do not already keep such a log. Site log entries should include information such as listed in [Table 7](#).

Table 7. Sample site log entries

Entry	Description
Installation	Make a copy of the installation checklist and insert it into the site log
Upgrades and maintenance	Use the site log to record ongoing maintenance and expansion history
Configuration changes	Record all changes and the reasons for them
Maintenance	Schedules, requirements, and procedures performed
Comments	Notes, and problems
Software	Changes and updates to SmartWare software

Network Information

Network connection considerations that you should take into account for planning are provided for several types of network interfaces are described in the following sections.

Network Diagram

Draw a network overview diagram that displays all neighboring IP nodes, connected elements and telephony components.

IP Related Information

Before you can set up the basic IP connectivity for your SmartNode, you should have the following information:

- IP addresses used for Ethernet LAN and WAN ports
- Subnet mask used for Ethernet LAN and WAN ports

- IP addresses and/or URL of SIP servers or Internet telephony services (if used)
- Login and password for PPPoE Access
- Login and password for SIP or H.323 based telephony services
- IP addresses of central TFTP, HTTP, or HTTPs server used for configuration upload and download (optional)

Software Tools

You will need a PC (or equivalent) with Windows Telnet or a program such as *Tera Term Pro Web* to configure the software on your SmartNode.

AC Power Mains

If you suspect that your AC power is not reliable, for example if room lights flicker often or there is machinery with large motors nearby, have a qualified professional test the power. Patton recommends that you include an uninterruptible power supply (UPS) in the installation to ensure that VoIP service is not impaired if the power fails. Refer to “[Connecting the power supply](#)” on page 23.

Location and Mounting Requirements

The SmartNode is intended to be placed on a desktop or similar sturdy, flat surface that offers easy access to the cables. Allow sufficient space at the rear of the chassis for cable connections. Additionally, you should consider the need to access the unit for future upgrades and maintenance.

Installing the SmartNode

SmartNode hardware installation consists of the following:

- Placing the device at the desired installation location (see section “[Placing the SmartNode](#)” on page 22)
- Connecting the interface and power cables (see section “[Installing Cables](#)”)

When you finish installing the SmartNode, go to chapter 4, “[Initial Configuration](#)” on page 25.

Placing the SmartNode

Place the unit on a desktop or similar sturdy, flat surface that offers easy access to the cables. The unit should be installed in a dry environment with sufficient space to allow air circulation for cooling.

Note For proper ventilation, leave at least 2 inches (5 cm) to the left, right, front, and rear of the unit.

Installing Cables



Do not work on the system or connect or disconnect cables during periods of lightning activity.

Connect the cables in the following order:



CAUTION

The interconnecting cables shall be acceptable for external use and shall be rated for the proper application with respect to voltage, current, anticipated temperature, flammability, and mechanical serviceability.

1. Connect the 10/100/1000Base-T Ethernet LAN and WAN (see section “[Connecting the 10/100/1000 Base-T Ethernet LAN and WAN cables](#)” on page 23)
2. If applicable, connect the DSL WAN port (see section “[Installation cable requirements for the DSL WAN cable \(SN5300/4B2G/EUI and SN5300/4B4G/EUI only\)](#)” on page 23)
3. Connect the power mains cable (see section “[Connecting the power supply](#)” on page 23)

Connecting the 10/100/1000 Base-T Ethernet LAN and WAN cables

The SmartNode has automatic MDX (auto-crossover) detection and configuration on all Ethernet ports. Any of the ports can be connected to a host or hub/switch with a straight-through or cross-over wired cable.

1. Connect to the subscriber port of the broadband access modem (DSL, cable) to *ETH 0/0*. (The behavior of the physical Ethernet port can be configured, to be used as either LAN, WAN, or DMZ interface).

Note The SmartNode Ethernet ports operate in Full Duplex mode only. Do not connect to Half Duplex ports. For best results, use auto-negotiation. Auto negotiation is mandatory when using 1000BaseT (Gigabit) Ethernet.

2. Connect port ETH 0/1 to your LAN. (The behavior of the physical Ethernet port can be configured, to be used as either LAN, WAN, or DMZ interface).

For details on the Ethernet port pinout and cables, refer to [Appendix C, “Cabling”](#) on page 42 and [Appendix D, “Port Pin-outs”](#) on page 45.

Installation cable requirements for the DSL WAN cable (SN5300/4B2G/EUI and SN5300/4B4G/EUI only)

The SN5300/4B2G/EUI and SN5300/4B4G/EUI comes with a universal option for a G.SHDSL-EFM/ATM interface. Use a straight-through RJ-11 cable to connect the G.SHDSL-EFM/ATM port.

Connecting the power supply

The 5400 has the option of an internal or external [External AC Power Supply](#), see [Figure 8](#).

External AC Power Supply.



WARNING

- Do not connect power to the AC Mains at this time.
- There are no user-serviceable parts in the power supply section of the Model 5400. Contact Patton Electronics Technical support at (301)975-1007, via our web site at <http://www.patton.com>, or by e-mail at support@patton.com, for more information.

1. Insert the female end of the AC power to the mains port.

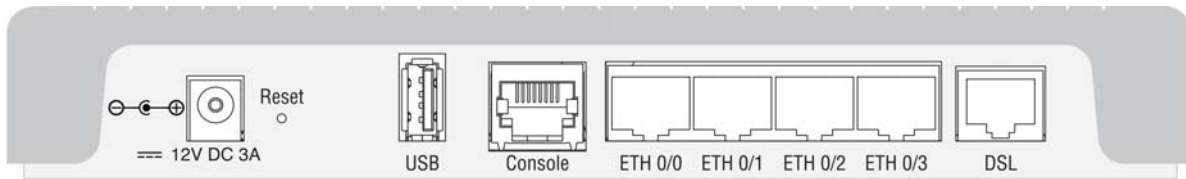 


Figure 8. SN5480/5490 rear panel

2. Verify that the AC power cord included with your SmartNode is compatible with local standards. If it is not, refer to [“Contacting Patton for Assistance”](#) on page 30 to find out how to replace it with a compatible power cord.
3. Connect the male end of the AC power cord to an appropriate AC power outlet.

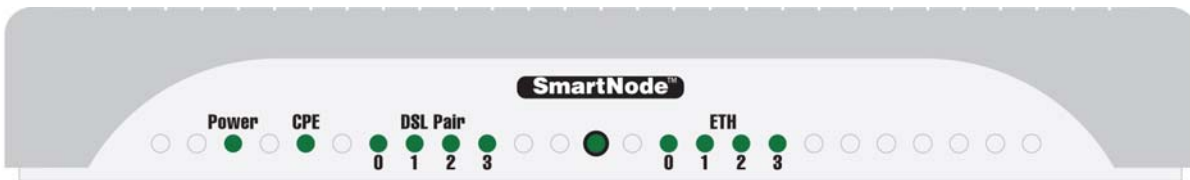 


Figure 9. SN5480/5490 Power LED

4. Verify that the green *Power* LED is lit (see [Figure 9](#)).

Chapter 4 **Initial Configuration**

Chapter contents

Introduction	30
1. Connecting the SmartNode to Your Laptop PC	30
2. Configuring the Desired IP Address	31
Factory-default IP Settings	31
Login	31
Changing the WAN IP Address	31
3. Connecting the SmartNode to the Network	32
4. Loading the Configuration (optional)	33
Additional Information	33

Introduction

This chapter leads you through the basic steps to set up a new SmartNode and to download a configuration. Setting up a new SmartNode consists of the following main steps:

Note If you haven't already installed the SmartNode, refer to chapter 3, “SmartNode Installation” on page 20.

- Connecting the SmartNode to your laptop PC
- Configuring the desired IP address
- Connecting the SmartNode to the network
- Loading the configuration (optional)

Connecting the SmartNode to Your Laptop PC

First the SmartNode must be connected to the mains power supply with the power cable. Wait until the *Power* LED stops blinking and stays lit constantly. Now the SmartNode is ready.



The interconnecting cables shall be acceptable for external use and shall be rated for the proper application with respect to voltage, current, anticipated temperature, flammability, and mechanical serviceability.

The SmartNode 5480 and 5490 Series is equipped with Auto-MDX Ethernet ports, so you can use straight-through cables for host or hub/switch connections (see [Figure 10](#)).

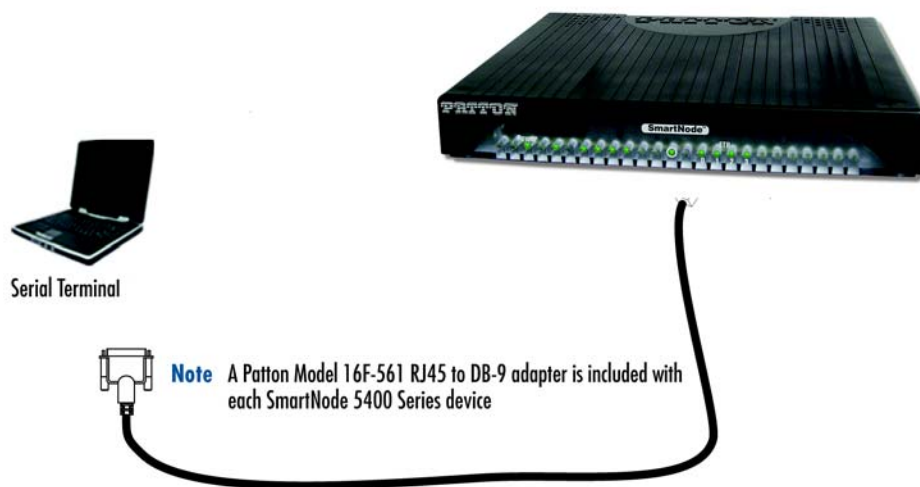 


Figure 10. Connecting the SmartNode to your laptop PC

The SmartNode by default has a static IP address configured (192.168.200.10) and DHCP client is running on the same Ethernet port 0/0. There are two options to connect to the SmartNode:

1. Configure a static IP on your Laptop PC (192.168.200.10).

Configuring the Desired IP Address

Factory-default IP Settings

The factory default configuration for the Ethernet interface IP addresses and network masks are listed in Table 8. Both Ethernet interfaces are activated upon power-up. LAN interface *ETH 0/1 (LAN)* provides a default DHCP server, the WAN interface uses DHCP client to automatically assign the IP address and network mask.

Table 8. Factory default IP address and network mask configuration

	IP Address	Network Mask
Ethernet Interface ETH 0/0	DHCP 192.168.200.10	DHCP 255.255.255.0

If these addresses match with those of your network, go to section “[Connecting the SmartNode to the Network](#)” on page 28. Otherwise, refer to the following sections to change the addresses and network masks.

Login

To access the SmartNode, start the Telnet application. Type the default IP address for the SmartNode into the address field: **192.168.200.10**. Accessing your SmartNode via a Telnet session displays the login screen. Type the factory default login: *administrator* and leave the password empty. Press the *Enter* key after the password prompt.

```
login:admin
password: <Enter>
192.168.200.10>
```

After you have successfully logged in you are in the operator execution mode, indicated by > as command line prompt. With the commands *enable* and *configure* you enter the configuration mode.

```
192.168.1.1>enable
192.168.1.1#configure
192.168.1.1(cfg)#
```

Changing the WAN IP Address

Select the context IP mode to configure an IP interface.

```
192.168.1.1(cfg)#context ip ROUTER
192.168.1.1(ctx-ip)[router]#
```

Now you can set your IP address and network mask for the interface *ETH 0/0 (WAN)*. Within this example a network 172.16.1.0/24 address is assumed. The IP address in this example is set to *172.16.1.99* (you should set this the IP address given to you by your network provider).

```
192.168.1.1(ctx-ip)[router]#interface LAN
192.168.1.1(if-ip)[LAN]#ipaddress 172.16.1.99 255.255.255.0
2002-10-29T00:09:40 : LOGININFO : Link down on interface WAN.
2002-10-29T00:09:40 : LOGININFO : Link up on interface WAN.
172.16.1.99(if-ip)[LAN]#
```

Copy this modified configuration to your new start-up configuration. This will store your changes in non-volatile memory. Upon the next start-up the system will initialize itself using the modified configuration.

```
172.16.1.99(if-ip)[WAN]#copy running-config startup-config
172.16.1.99(if-ip)[WAN]#
```

The SmartNode can now be connected to your network.

Connecting the SmartNode to the Network

In general, the SmartNode will connect to the network via the *WAN (ETH 0/0)* port. This enables the SmartNode to offer routing services to the PC hosts on *LAN (ETH 0/1)* port. The SmartNode 5300 is equipped with Auto-MDX Ethernet ports, so you can use straight-through or crossover cables for host or hub/switch connections (see Figure 11).



The interconnecting cables shall be acceptable for external use and shall be rated for the proper application with respect to voltage, current, anticipated temperature, flammability, and mechanical serviceability.



Figure 11. Connecting the SmartNode to the network

You can check the connection with the ping command from the SmartNode to another host on the network.

```
172.16.1.99(if-ip)[WAN]#ping <IP Address of the host>
```

Note If the WAN address is configured manually a default route should be configured pointing to the network default gateway. (For information on configuring the default gateway, refer to section “Set IP addresses” in the *Trinity CLI configuration reference Guide*.)

Loading the Configuration (optional)

Patton provides a collection of configuration templates on the support page at www.patton.com/support/kb.asp - one of which may be similar enough to your application that you can use it to speed up configuring the SmartNode. Simply download the configuration note that matches your application to your PC. Adapt the configuration as described in the configuration note to your network (remember to modify the IP address) and copy the modified configuration to a TFTP server. The SmartNode can now load its configuration from this server.

Note If your application is unique and not covered by any of Patton's configuration templates, you can manually configure the SmartNode instead of loading a configuration file template. In that case, refer to the *SmartNode Series SmartWare Software Configuration Guide* for information on configuring the SmartNode device.

In this example we assume the TFTP server on the host with the IP address 172.16.1.11 and the configuration named *SN.cfg* in the root directory of the TFTP server.

```
172.16.1.99(if-ip)[WAN]#copy tftp://172.16.1.11/SN.cfg startup-config
Download...100%
172.16.1.99(if-ip)[WAN]#
```

After the SmartNode has been rebooted the new startup configuration will be activated.



When you issue the **reload** command, the SmartNode will ask if you want to copy the running configuration to the startup configuration. Since you just downloaded a configuration file to the startup configuration you must answer this question with **NO**. Otherwise, the downloaded configuration will be overwritten and lost!

```
172.16.1.99(if-ip)[WAN]#reload
Type 'yes' to restart/halt, anything else to cancel: yes
The system is going down
```

Additional Information

For detailed information about configuring and operating guidance, set up procedures, and troubleshooting, refer to the *SmartNode Series SmartWare Software Configuration Guide* available online at [www.patton.com/kb/index.asp?dt=Manuals%20\(PDF\)](http://www.patton.com/kb/index.asp?dt=Manuals%20(PDF))

Chapter 5

Contacting Patton for Assistance

Chapter contents

Introduction	35
Contact Information	35
Patton Support Headquarters in the USA	35
Alternate Patton Support for Europe, Middle East, and Africa (EMEA)	35
Warranty Service and Returned Merchandise Authorizations (RMAs)	35
Warranty Coverage	35
Out-of-warranty service	36
Returns for credit	36
Return for credit policy	36
RMA Numbers	36
Shipping instructions	36

Introduction

This chapter contains the following information:

- “[Contact Information](#)”—describes how to contact Patton technical support for assistance.
- “[Warranty Service and Returned Merchandise Authorizations \(RMAs\)](#)”—contains information about the warranty and obtaining a return merchandise authorization (RMA).

Contact Information

Patton Electronics offers a wide array of free technical services. If you have questions about any of our other products we recommend you begin your search for answers by using our technical knowledge base. Here, we have gathered together many of the more commonly asked questions and compiled them into a searchable database to help you quickly solve your problems.

Patton Support Headquarters in the USA

- Online support: available at www.patton.com
- E-mail support: e-mail sent to support@patton.com will be answered within 1 business day
- Telephone support: standard telephone support is available five days a week—from 8:00 am to 5:00 pm EST (1300 to 2200 UTC/GMT)—by calling +1 (301) 975-1007
- Fax: +1 (301) 869-9293

Alternate Patton Support for Europe, Middle East, and Africa (EMEA)

- Online support: available at www.patton-inalp.com
- E-mail support: e-mail sent to support@patton-inalp.com will be answered within 1 business day
- Telephone support: standard telephone support is available five days a week—from 9:00 am to 5:30 pm MET (0800 to 1630 UTC/GMT)—by calling +41 (0)31 985 25 55
- Fax: +41 (0)31 985 25 26

Warranty Service and Returned Merchandise Authorizations (RMAs)

Patton Electronics is an ISO-9001 certified manufacturer and our products are carefully tested before shipment. All of our products are backed by a comprehensive warranty program.

Note If you purchased your equipment from a Patton Electronics reseller, ask your reseller how you should proceed with warranty service. It is often more convenient for you to work with your local reseller to obtain a replacement. Patton services our products no matter how you acquired them.

Warranty Coverage

Our products are under warranty to be free from defects, and we will, at our option, repair or replace the product should it fail within one year from the first date of shipment. Our warranty is limited to defects in workmanship or materials, and does not cover customer damage, lightning or power surge damage, abuse, or unauthorized modification.

Out-of-warranty service

Patton services what we sell, no matter how you acquired it, including malfunctioning products that are no longer under warranty. Our products have a flat fee for repairs. Units damaged by lightning or other catastrophes may require replacement.

Returns for credit

Customer satisfaction is important to us, therefore any product may be returned with authorization within 30 days from the shipment date for a full credit of the purchase price. If you have ordered the wrong equipment or you are dissatisfied in any way, please contact us to request an RMA number to accept your return. Patton is not responsible for equipment returned without a Return Authorization.

Return for credit policy

- **Less than 30 days:** No Charge. Your credit will be issued upon receipt and inspection of the equipment.
- **30 to 60 days:** We will add a 20% restocking charge (crediting your account with 80% of the purchase price).
- **Over 60 days:** Products will be accepted for repairs only.

RMA Numbers

RMA numbers are required for all product returns. You can obtain an RMA by doing one of the following:

- Completing a request on the RMA Request page in the *Support* section at www.patton.com
- By calling +1 (301) 975-1007 and speaking to a Technical Support Engineer
- By sending an e-mail to returns@patton.com

All returned units must have the RMA number clearly visible on the outside of the shipping container. Please use the original packing material that the device came in or pack the unit securely to avoid damage during shipping.

Shipping instructions

The RMA number should be clearly visible on the address label. Our shipping address is as follows:

Patton Electronics Company

RMA#: xxxx

7622 Rickenbacker Dr.

Gaithersburg, MD 20879-4773 USA

Patton will ship the equipment back to you in the same manner you ship it to us. Patton will pay the return shipping costs.

Appendix A **Compliance Information**

Chapter contents

Compliance	38
EMC	38
Safety	38
PSTN Regulatory	38
FCC Part 68 (ACTA) Statement	39
Industry Canada Notice	39
CE Declaration of Conformity	40
Authorized European Representative	40

Compliance

EMC

- EN55022, Class A
- EN55024

Safety

- IEC/EN60950-1, 2nd edition

PSTN Regulatory

- ACTA (Part 68)
- IC CS-03
- AS/ACIF S016:2001
- AS/ACIF S038:2001
- ETSI TBR 12, TBR 12/A1 & TBR 13
- TBR 4
- TNA 117: 1992
- TNA 134: 1997
- PTC 220

FCC Part 68 (ACTA) Statement

This equipment complies with Part 68 of FCC rules and the requirements adopted by ACTA. On the bottom side of this equipment is a label that contains—among other information—a product identifier in the format US: AAAEQ##TXXXX. If requested, this number must be provided to the telephone company.

The method used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA.

If this equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

If trouble is experienced with this equipment, for repair or warranty information, please contact our company. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information.

Industry Canada Notice

This equipment meets the applicable Industry Canada Terminal Equipment Technical Specifications. This is confirmed by the registration number. The abbreviation, IC, before the registration number signifies that registration was performed based on a Declaration of Conformity indicating that Industry Canada technical specifications were met. It does not imply that Industry Canada approved the equipment.

This Declaration of Conformity means that the equipment meets certain telecommunications network protective, operational and safety requirements. The Department does not guarantee the equipment will operate to the user's satisfaction. Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. In some cases, the company's inside wiring associated with a single line individual service may be extended by means of a certified connector assembly (telephone extension cord). The customer should be aware that compliance with the above condition may not prevent degradation of service in some situations. Repairs to some certified equipment should be made by an authorized maintenance facility designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment. Users should ensure for their own protection that the ground connections of the power utility, telephone lines and internal metallic water pipe system, are connected together. This protection may be particularly important in rural areas.

CE Declaration of Conformity

Patton Electronics, Inc declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 2004/108/EC relating to electromagnetic compatibility, Directive 2006/95/EC relating to electrical equipment designed for use within certain voltage limits and Directive 2011/65/EC relating to RoHS compliance. The Declaration of Conformity may be obtained from Patton Electronics, Inc at www.patton.com/certifications.

The safety advice in the documentation accompanying this device shall be obeyed. The conformity to the above directive is indicated by CE mark on the device.

Authorized European Representative

D R M Green

European Compliance Services Limited.

Greyfriars Court

Paradise Square

Oxford, OX1 1BE, UK

Appendix B **Specifications**

Chapter contents

Data Connectivity	42
Voice Processing (signaling dependent)	42
Fax and Modem Support.....	42
Voice Signaling.....	42
IP Services	43
Management	43
System	43
Physical	43
WAN Daughter Card (if applicable).....	44
Identification of the SmartNode Devices via SNMP.....	45

Data Connectivity

Four 10/100/1000Base-Tx Gigabit Ethernet ports

All ports full duplex, autosensing, auto-MDX

Voice Processing (signaling dependent)

Up to 128 full-duplex channels with Voice CODECS:

- G.711 A-Law/ μ -Law (64 kbps)
- G.726 (ADPCM 16, 24, 32, 40 kbps)
- G.723.1 (5.3 or 6.3 kbps)
- G.729ab (8 kbps)
- Transparent ISDN data

G.168 echo cancellation (128 ms)

Up to 120 simultaneous voice or T.38 fax calls

Configurable transmit packet length (prime announcement in SIP SDP)

Fax and Modem Support

T.38 Fax-Relay (Gr. 3 Fax, 9.6 k, 14.4 k), (SIP signaling only)

G.711 Fax-Bypass (SIP signaling only)

Voice Signaling

SIPv2

SIP TLS

SIP call transfer, redirect

IP Services

IPv4 router

IPv6 router

Programmable static routes

ICMP redirect (RFC 792); Packet fragmentation

DiffServe/ToS set or queue per header bits

Packet Policing discards excess traffic

802.1p VLAN tagging

Management

Web-based GUI

Industry standard CLI with local console (RJ-45, RJ-231, 9600 bps, 8, N, 1) and remote Telnet access, fully documented

HPPT web management

Firmware loading by TFTP, HTTP, and HTTPS

Configuration & firmware loading

SNMP v1 agent (MIB II and private MIB)

Built-in diagnostic tools (trace, debug)

Secure Auto-provisioning

Physical

Dimensions: 11.9W x 1.71H x 7.16D inch (302W x 44H x 182mm)

Weight: <21 oz. (<600g)

Power Consumption: < 16W

Operating temperature: 32–104°F (0–40°C)

Operating humidity: up to 90%, non condensing

WAN Daughter Card (if applicable)

Table 9. G.SHDSL Daughter Card Specifications

Factor	Specs
DSL	• ITU-T G.991.2 (and Amendment 2) • ITU-T G.991.2, Annex A, B, F, G • Upgradable to ITU-T G.SHDSL.BIS—Annex F and G • G.991.2 2/4 (1/2 pair) operation • G.994.1 (G.hs) (per G.991.2) • ITU-T G.991.2 Section E.9 (TPS-TC for ATM transport) • ITU-T EFM
DSL Connection	RJ-11/12 (2-wire)
Management	• I.610 OAM F4/F5 • Management interfaces: GUI and Telnet • Software upgrade: GUI and TFTP
ATM Support	• Classical IPoA (RFC 1577/2225) • PPPoE Client (over ATM) (RFC 2516) • IPoA (RFC 2684/1483) • ATM AAL5 encapsulation • Max. 8 PVCs • User selectable VC MUX and LLC MUX (default) • Configurable auto-connection • ATM QoS: UBR (default), CBR, and VBR-rt, VBR-nrt, UBR: per VC queuing • Auto-configuration: TR-037 & ILMI 4.0
Interworking/Interoperability	• G.SHDSL Interoperability: - Alcatel - NEC - Lucent Anymedia - Lucent Stinger • BRAS Interoperability: - Cisco - Redback
Fiber	• 100Mbps and 1000Mbps Fiber SFP (For a list of test SFP modules, please refer to http://www.patton.com/products/sfpmodules.asp)

Identification of the SmartNode Devices via SNMP

All SmartNode devices have assigned sysObjectID (.iso.org.dod.internet.mgmt.mib-2.system.sysObjectID) numbers (see [Table 10](#)).

Table 10. SmartNode Models and their Unique sysObjectID

SmartNode Model	SysObjectID
SN5300/4B/EUI	.iso.org.dod.internet.private.enterprises.patton.products.sn4970.1 1.3.6.1.4.1.1768.100.4.24.1
SN5300/4B2G/EUI	.iso.org.dod.internet.private.enterprises.patton.products.sn4970.2 1.3.6.1.4.1.1768.100.4.24.2
SN5300/4B4G/EUI	1.3.6.1.4.1.1768.100.4.24.3

According to [Table 10](#), an SNMP get request to *.iso.org.dod.internet.mgmt.mib-2.system.sysObjectID* of a SmartNode 5480/32P/EUI device reads out a numeric OID of *1.3.6.1.4.1.1768.100.4.24.1*. The mapping of the sysObjectID to each of the SmartNode model is realized with the SmartNode product identification MIB.

Appendix C **Cabling**

Chapter contents

Introduction	47
Console	47
Ethernet	48

Introduction

This section provides information on the cables used to connect the SmartNode and the interface cards to the existing network infrastructure and to third party products.

Console

The SmartNode can be connected to a serial terminal over its serial console port, as depicted in [Figure 12](#).

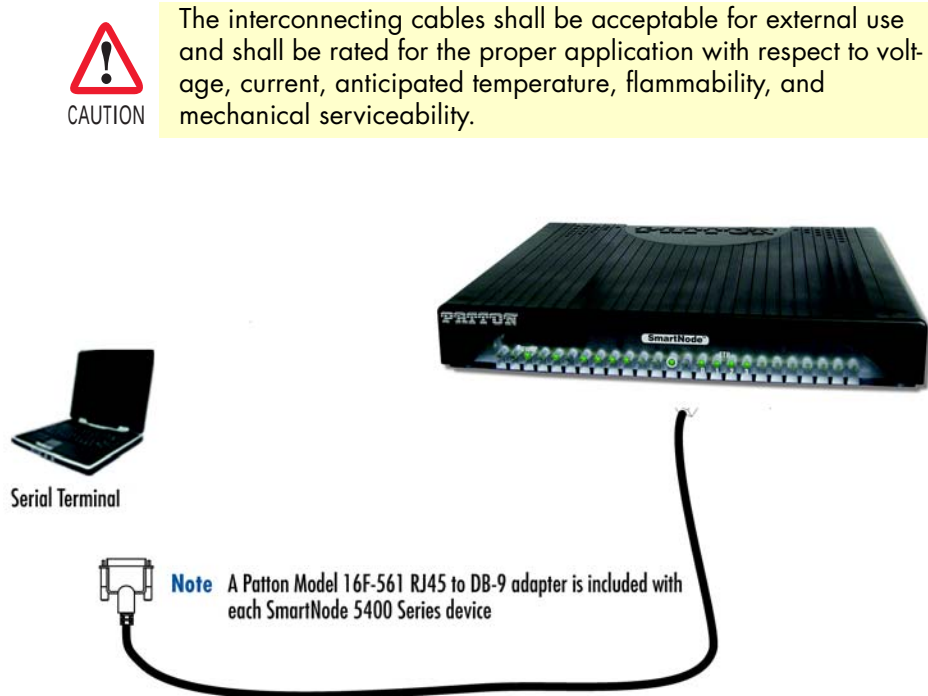 


Figure 12. Connecting a serial terminal

Note See section “[Console Port](#)” on page 46 for console port pin-outs and serial port speed.

Ethernet

Ethernet devices (10Base-T/100Base-T/1000Base-T) are connected to the SmartNode over a cable with RJ-45 plugs. All Ethernet ports on the SN5480/5490 are Auto-MDX use any straight or crossover cable to connect to hubs, switches, PCs or other devices.



CAUTION

The interconnecting cables shall be acceptable for external use and shall be rated for the proper application with respect to voltage, current, anticipated temperature, flammability, and mechanical serviceability.

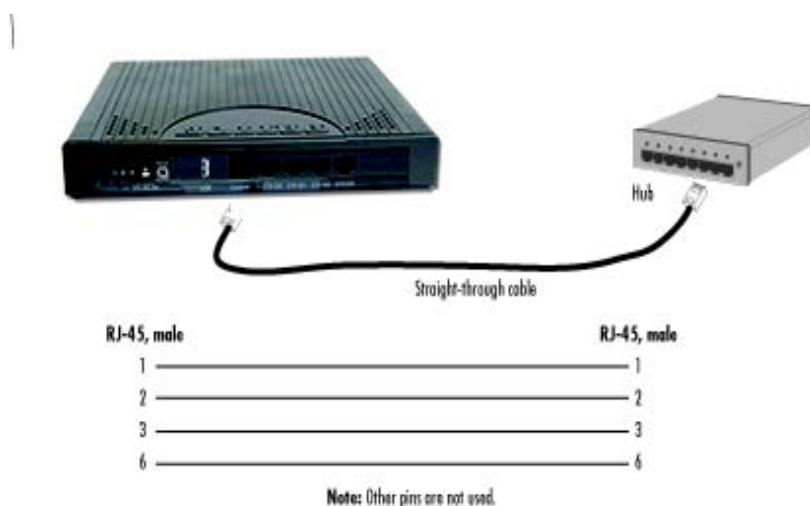 


Figure 13. Typical Ethernet straight-through cable diagram for 10/100Base-T



Figure 14. Typical Ethernet straight-through cable diagram for 1000Base-T

Appendix D **Port Pin-outs**

Chapter contents

Introduction	50
Console Port	50
Ethernet	50
G.SHDSL Port	51
EFM Port	52
Fiber Port	52

Introduction

This section provides pin-out information for the ports of the SmartNode.

Console Port

Configuration settings: 19200 bps, 8 bits, no parity, 1 stop bit, no flow control

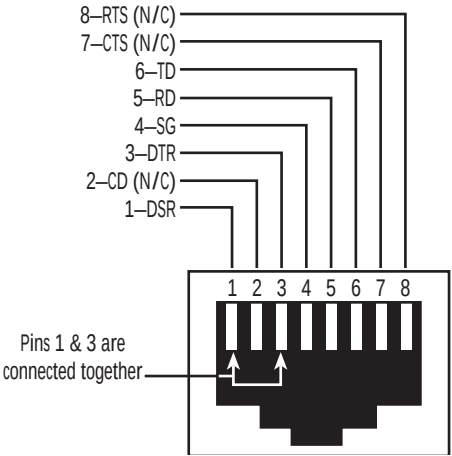 


Figure 15. EIA-561 (RJ-45 8-pin) port

Note N/C means no internal electrical connection.

Ethernet

Table 11. RJ45 socket 10/100Base-T

Pin	Signal
1	TX+
2	TX-
3	RX+
6	RX-

Note Pins not listed are not used.

G.SHDSL-EFM/ATM Port

Table 12. RJ-45 connector

Pin	Signal	Pair
1	Tip	1
2	Ring	1
3	Tip	2
4	Ring	0
5	Tip	0
6	Ring	2
7	Tip	3
8	Ring	3

Appendix E

SmartNode 5300 Series Factory Configuration

Chapter contents

Introduction54

Introduction

The factory configuration settings for SmartNode 5300 is as follows:

```
#-----#
#                                     #
# Shipping Configuration             #
#                                     #
#-----#

cli version 4.00
snmp shutdown
ntp-port-range 6000 9999
timer PROVISIONING now + 3 minutes "provisioning execute PF_PROVISIONING_CONFIG"

profile aaa DEFAULT
  method 1 local rule required
  method 2 none rule required

console
  use profile aaa DEFAULT

telnet-server
  use profile aaa DEFAULT
  no shutdown

ssh-server
  use profile aaa DEFAULT
  no shutdown

web-server http
  use profile aaa DEFAULT
  no shutdown

ntp
  server pool.ntp.org
  no shutdown

dns-server
  no shutdown

profile provisioning PF_PROVISIONING_CONFIG
  destination configuration
  activation reload immediate
  location 1 http://redirect.patton.com/
    $(system.mac);mac=$(system.mac);serial=$(system.serial);hwMajor=$(system.hw.major);hwMinor
   =$(system.hw.minor);swMajor=$(system.sw.major);swMinor=$(system.sw.minor);swDate=$(system
    m.sw.date);productName=$(system.product.name);cliMajor=$(cli.major);cliMi-
    nor=$(cli.minor);osName=Trinity;subDirTrinity=/Trinity;subDirSmart-
    Ware=;dhcp66=$(dhcp.66);dhcp67=$(dhcp.67)
  location 2 $(dhcp.66)
  location 3 $(dhcp.66)/$(system.mac).cfg
  location 4 http://$(dhcp.66)/$(dhcp.67)
  location 5 http://$(dhcp.66)/$(system.mac).cfg
  location 6 tftp://$(dhcp.66)/$(dhcp.67)
  location 7 tftp://$(dhcp.66)/$(system.mac).cfg
```

```
profile voip DEFAULT
  codec 1 g711alaw64k rx-length 20 tx-length 20
  codec 2 g711ulaw64k rx-length 20 tx-length 20

profile sip DEFAULT

context ip ROUTER

  interface LAN
    ipaddress LAN 192.168.200.10/24
    ipaddress DHCP

  routing-table DEFAULT

profile ppp DEFAULT

context bridge

context switch-group DEFAULT
  shutdown

port ethernet 0 0
  bind interface ROUTER LAN
  no shutdown

port ethernet 0 1
  shutdown

port ethernet 0 2
  shutdown

port ethernet 0 3
  shutdown
```

Appendix F

End User License Agreement

Chapter contents

End User License Agreement	57
1. Definitions	57
2. Title	57
3. Term	57
4. Grant of License	57
5. Warranty	57
6. Termination	58
7. Other licenses	58
8. SmartWare licenses	58

End User License Agreement

By opening this package, operating the Designated Equipment or downloading the Program(s) electronically, the End User agrees to the following conditions:

Definitions

Effective Date shall mean the earliest date of purchase or download of a product containing the Patton Electronics Company Program(s) or the Program(s) themselves.

Program(s) shall mean all software, software documentation, source code, object code, or executable code.

End User shall mean the person or organization which has valid title to the Designated Equipment.

Designated Equipment shall mean the hardware on which the Program(s) have been designed and provided to operate by Patton Electronics Company.

Title

Title to the Program(s), all copies of the Program(s), all patent rights, copyrights, trade secrets and proprietary information in the Program(s), worldwide, remains with Patton Electronics Company or its licensors.

Term

The term of this Agreement is from the Effective Date until title of the Designated Equipment is transferred by End User or unless the license is terminated earlier as defined in section “[Termination](#)” on page 53.

Grant of License

During the term of this Agreement, Patton Electronics Company grants a personal, non-transferable, non-assignable and non-exclusive license to the End User to use the Program(s) only with the Designated Equipment at a site owned or leased by the End User.

The End User may copy licensed Program(s) as necessary for backup purposes only for use with the Designated Equipment that was first purchased or used or its temporary or permanent replacement.

The End User is prohibited from disassembling; decompiling, reverse-engineering or otherwise attempting to discover or disclose the Program(s), source code, methods or concepts embodied in the Program(s) or having the same done by another party.

Should End User transfer title of the Designated Equipment to a third party after entering into this license agreement, End User is obligated to inform the third party in writing that a separate End User License Agreement from Patton Electronics Company is required to operate the Designated Equipment.

Warranty

The Program(s) are provided *as is* without warranty of any kind. Patton Electronics Company and its licensors disclaim all warranties, either express or implied, including but not limited to the implied warranties of merchantability, fitness for a particular purpose or non-infringement. In no event shall Patton Electronics Company or its licensors be liable for any damages whatsoever (including, without limitation, damages for loss of business profits, business interruption, loss of business information, or other pecuniary loss) arising out of the use of or inability to use the Program(s), even if Patton Electronics Company has been advised of the possibility of such damages. Because some states do not allow the exclusion or limitation of liability for consequential or incidental damages, the above limitation may not apply to you.

If the Program(s) are acquired by or on behalf of a unit or agency of the United States Government, the Government agrees that such Program(s) are *commercial computer software* or *computer software documentation* and that, absent a written agreement to the contrary, the Government's rights with respect to such Program(s) are limited by the terms of this Agreement, pursuant to Federal Acquisition Regulations 12.212(a) and/or DEARS 227.7202-1(a) and/or sub-paragraphs (a) through (d) of the "Commercial Computer Software - Restricted Rights" clause at 48 C.F.R. 52.227-19 of the Federal Acquisition Regulations as applicable.

Termination

The End User may terminate this agreement by returning the Designated Equipment and destroying all copies of the licensed Program(s).

Patton Electronics Company may terminate this Agreement should End User violate any of the provisions of section "Grant of License" on page 52.

Upon termination for A or B above or the end of the Term, End User is required to destroy all copies of the licensed Program(s)

Other licenses

The Program may be subject to licenses extended by third parties. Accordingly, Patton Electronics Company licenses the Programs subject to the terms and conditions dictated by third parties. Third party software identified to the Programs includes the LGPL (Lesser General Public License) open source license distributed to your pursuant to the LGPL license terms (<http://www.gnu.org/licenses/lgpl.html>).

SmartWare licenses

- A routing license is included at no charge.
- MGCP and VPN capabilities will require the purchase of an additional license.

RedBoot (Red Hat Embedded Debug and Bootstrap) embedded system debug/bootstrap environment from Red Hat distributed to you pursuant to the eCos license terms (<http://ecos.sourceware.org/license-overview.html>) and GNU General Public License (GPL) terms (<http://www.gnu.org/copyleft/gpl.html>). Source code is available upon request.